

03.132 WRS Microbial Filter Saturation

(03. HSS Procedure)

OBJECTIVE:

To maintain the Water Recovery System (WRS) by replacing microbial filter.

EQUIPMENT:

PPE safety glasses

PPE Nitrile gloves


HSS KIT: Microbial filter (will be gathered during the procedure)

REFERENCES:

Serial Number Tracking Sheet

NOTE

Do not turn off the main pump power switch for the WRS pump or heater

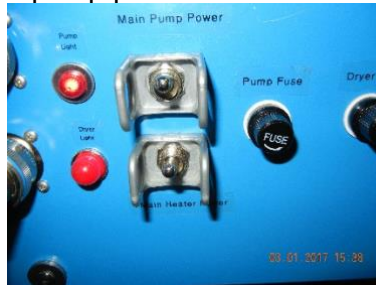

L2C

1.REMOVE MICROBIAL FILTER

1.1 Turn Distillation Gas Vent Valve clockwise to closed position.

1.2 Grasp Microbial filter and turn clockwise to remove.



Figure 2: Microbial Filter

03.132 WRS Microbial Filter Saturation

(03. HSS Procedure)

- 1.3 Stow used microbial filter in HSS kit in Ziploc bag labeled "Used Microbial Filter".
- 1.4 Record serial number in Serial Number Tracking sheet.

L2C

2. INSTALL NEW MICROBIAL FILTER

- 2.1 Remove new Microbial filter from HSS kit.
- 2.2 Insert new Microbial filter into filter housing and turn counter clockwise until you feel a click.
- 2.3 Record serial number of new microbial filter in the Serial Number Tracking Sheet.
- 2.4 Turn Distillation Gas Vent Valve counterclockwise to open position.
- 2.5 Doff PPE gloves and safety glasses.
- 2.6 Stow all equipment.